

TROUBLE SHOOTING FOR MODEL RN-16

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>
BLOWING AIR WILL NOT CYCLE	105 VALVE.....IN MID-CYCLE POSITION
LEAKING AIR	10-24x 5/8..... DAMAGED OR WORN SCREWS 119 VALVE..... DAMAGED OR WORN 112 GASKET..... DAMAGED OR WORN
TOO RUNS AUTOMATIC	114 BUMBPER..... DAMAGED OR SWOLLEN USE OF SOLVENTS OR DETERGENT OILS
LACK OF POWER.....	IMPROPER FITTING SIZE. USE 3/8" SERIES. AIR HOSE TOO LONG. COMPRESSOR SIZE. DIRTY AIR SUPPLY. USE OF SOLVENTS OR DETERGENT OILS.
SHEARING NAIL..... HEADS	IMPROPER SIZE GUIDE